



# SolidFire Node Packing Instructions

## Preparing the Box for Unit Packing

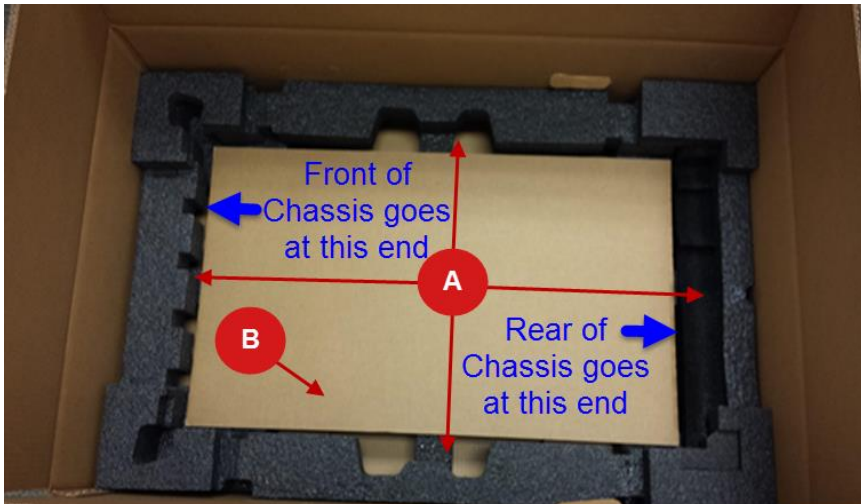


A. Leave foam inserts in the box  
B. Leave bottom support in the box (remove all other contents)

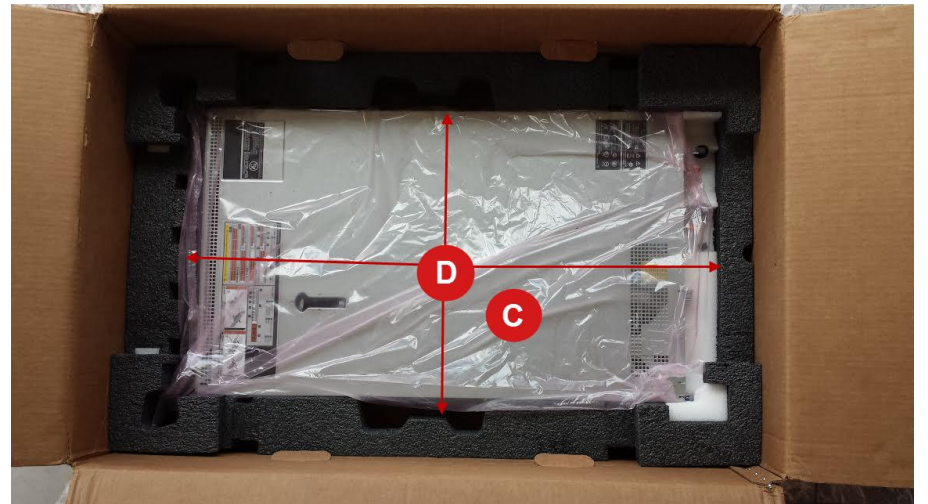

C. Insert node in anti-static bag  
D. Insert node between the foam inserts

## Preparing the Node for Shipping

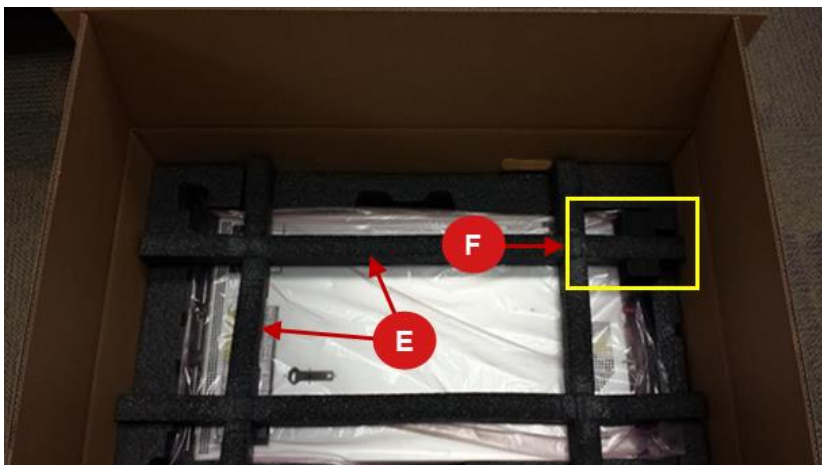

E. Add foam cross pieces  
F. Ensure foam block secures the power supply




G. Add cardboard box spacer (provided)

## Preparing the Node for Shipping



H. Add Rail Kit (if rail kit is being returned) or spacer box (provided)

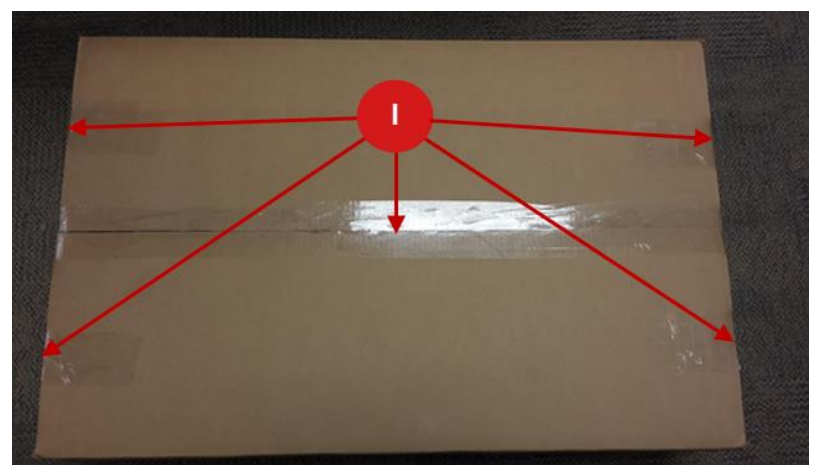

I. Close box and secure with tape on seam and flaps

**Note:** If a return ship label was not included, contact your support representative and reference your case number to receive a return label.

**Note:** If you are returning a SolidFire Fibre Channel node, do not return the SFP+ GBIC in the shipping package. Remove this part, set it aside, and use it in your replacement node.



210-06736+A0