




NetApp®

Updated for 8.2.4

FlexArray Virtualization

Implementation Guide for NetApp® E-Series Storage

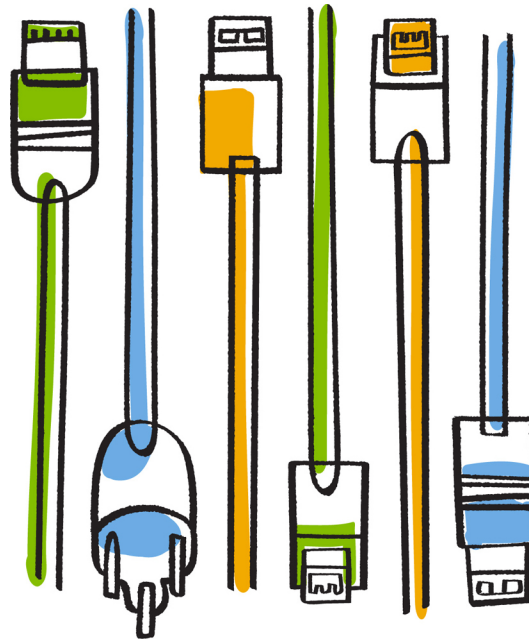

NetApp, Inc.
495 East Java Drive
Sunnyvale, CA 94089
U.S.

Telephone: +1 (408) 822-6000
Fax: +1 (408) 822-4501
Support telephone: +1 (888) 463-8277
Web: www.netapp.com
Feedback: doccomments@netapp.com

Part number: 215-10547_A0
November 2015

Contents

Understanding E-Series storage implementation with Data ONTAP	4
Data ONTAP systems that can use array LUNs on storage arrays	6
Requirements for configuring E-Series storage arrays	7
Required host type for E-Series storage arrays	7
Supported fabric-attached configurations for E-Series storage	
arrays	8
Stand-alone basic configuration	8
Stand-alone with two 2-port array LUN groups	8
Single 4-port array LUN group	9
Two 4-port array LUN groups	10
Eight-port array LUN group configuration	10
Data ONTAP FC initiator port attaching to multiple targets ports	12
Supported direct-attached configurations with E-Series storage	
arrays	14
Copyright information	17
Trademark information	18
How to send comments about documentation and receive update	
notifications	19
Index	20

Understanding E-Series storage implementation with Data ONTAP

Data ONTAP systems can be deployed with E-Series storage arrays. The E-Series storage array has back-end configuration requirements and limits on the supported configurations.

Information about Data ONTAP support for E-Series storage arrays

Not all Data ONTAP releases support the same features, configurations, storage array models, and Data ONTAP systems. During your deployment planning, you need to check Data ONTAP support information to ensure that the deployment conforms to Data ONTAP hardware and software requirements for all systems in the deployment.

Support information for deployments with E-Series storage arrays is included in the following documents:

Documents	Topics covered
<p>Interoperability Matrix at mysupport.netapp.com</p>	<p>Data ONTAP working with back-end devices, including the following:</p> <ul style="list-style-type: none"> • Supported storage arrays and storage array firmware • Supported switches and switch firmware • Whether your storage array supports nondisruptive (live) upgrade of the storage array firmware
<p><i>Hardware Universe</i> at hwu.netapp.com</p> <p>Note: Limits for Data ONTAP systems were previously provided in the <i>V-Series Limits Reference for Third-Party Storage</i> and <i>V-Series Support Matrix</i>.</p>	<p>Data ONTAP limits for releases and platforms, including the following:</p> <ul style="list-style-type: none"> • Minimum and maximum array LUN sizes including the minimum array LUN size for the root volume and spare array LUNs • Minimum aggregate size for aggregates with array LUNs • Minimum and maximum capacity • Neighborhood limits
<p><i>FlexArray Virtualization Installation Requirements and Reference Guide</i></p>	<p>Planning tasks for Data ONTAP implementation with E-Series, including:</p> <ul style="list-style-type: none"> • Planning the implementation • Connecting the Data ONTAP system and the array • Verifying the installation

Documents	Topics covered
E-Series documentation	<p>Information you may need when setting up the E-Series storage array could include the following:</p> <ul style="list-style-type: none"> • Site preparation requirements • Cabling instructions • SANtricity software installation and configuration instructions

Related documentation

The following documentation can be found at mysupport.netapp.com.

- *Hardware Universe* (formerly the *System Configuration Guide*)
- *FlexArray Virtualization Installation Requirements and Reference Guide*
- Interoperability Matrix at mysupport.netapp.com
- *E-Series Storage Systems Site Preparation Guide*
- *E-Series Storage Systems Hardware Cabling Guide*
- *SANtricity ES Storage Manager documentation*

Data ONTAP systems that can use array LUNs on storage arrays

V-Series (“V”) systems and new FAS platforms released in Data ONTAP 8.2.1 and later can use array LUNs if the proper license is installed. In discussions in the Data ONTAP and FlexArray Virtualization documentation, these systems are collectively referred to as Data ONTAP systems when it is necessary to make it clear which information applies to them and what information applies to storage arrays.

Note: Starting with Data ONTAP 8.2.1, the capability of using LUNs on a storage array, formerly identified as V-Series functionality, has a new name—*Data ONTAP FlexArray Virtualization Software*. The capability of using array LUNs continues to be available as a licensed feature in Data ONTAP.

Systems prior to Data ONTAP 8.2.1 that can use array LUNs

The only systems released prior to Data ONTAP 8.2.1 that can use array LUNs are V-Series systems—systems with a “V” or “GF” prefix. A V-Series system is an open storage controller that virtualizes storage from storage array vendors, native disks, or both into a single heterogeneous storage pool.

Note: Almost all Data ONTAP platforms released prior to Data ONTAP 8.2.1 were released with FAS and V-Series equivalent models (for example, a FAS6280 and a V6280). (For a few systems, there were no “V” equivalent models.) Although both types of models could access native disks, only the V-Series systems (a “V” or “GF” prefix) could attach to storage arrays.

Systems in Data ONTAP 8.2.1 and later that can use array LUNs

Starting with Data ONTAP 8.2.1, the model for how platforms are released and the storage they can use changes. Attaching to storage arrays is no longer limited to V-Series systems.

Starting with Data ONTAP 8.2.1, all new platforms are released as a single hardware model. This single hardware model has a FAS prefix; there are no longer separate “V” and FAS models for new platforms. If the V_StorageAttach license package is installed on a new FAS model, it can attach to storage arrays. (This is the same license required on a V-Series system.)

Important: FAS systems released prior to Data ONTAP 8.2.1 cannot use LUNs on storage arrays, even if they are upgraded to Data ONTAP 8.2.1 or later; only the “V” equivalent of a platform can use array LUNs.

Requirements for configuring E-Series storage arrays

There are system parameters that you must set and considerations to keep in mind when configuring a storage array to work with a Data ONTAP system.

Required host type for E-Series storage arrays

You must set the appropriate `host_type` option for the E-Series storage array to communicate with the Data ONTAP system. You can use SANtricity Storage Manager to set the host type.

For a given Data ONTAP release, you can set the required host type based on the version of the storage array firmware. The following tables list the host types that you can set based on the firmware versions:

Data ONTAP 8.2.3 and later releases in the Data ONTAP 8.2 release family

If your firmware version is...	Then set the host type to...
07.86.34.00 and later	ONTAP
08.10.14.00 and earlier	
08.10.15.00 and later	Data ONTAP (RDAC)
	Data ONTAP (ALUA)
08.20 and later	Data ONTAP (ALUA)

Note: The minimum supported version of SANtricity Storage Manager for firmware version 08.10.15.00 and later is 11.10.0G00.0026.

Data ONTAP 8.2.2 and earlier releases in the Data ONTAP 8.2 release family

If your firmware version is...	Then set the host type to...
07.86.34.00 and later	ONTAP
08.10.14.00 and earlier	
08.10.15.00 and later	Data ONTAP (RDAC)

Data ONTAP 8.1 release family starting with Data ONTAP 8.1.2

If your firmware version is...	Then set the host type to...
07.86.29.00 and earlier	AIX
07.86.34.00 and later	ONTAP
08.10.14.00 and earlier	
08.10.15.00 and later	Data ONTAP (RDAC)

Supported fabric-attached configurations for E-Series storage arrays

Only certain fabric-attached configurations of E-Series storage arrays deployed with Data ONTAP system are supported.


For additional information about specific array model configurations, see the Interoperability Matrix at mysupport.netapp.com.

Stand-alone basic configuration

The stand-alone basic configuration of a Data ONTAP system that uses array LUNs is a simple, fabric-attached configuration with a single FC initiator port pair accessing a single LUN group.

This configuration is supported for use with all storage arrays listed in the *Interoperability Matrix* as supported for the release and mode of Data ONTAP running on your system.

The following illustration shows this configuration:

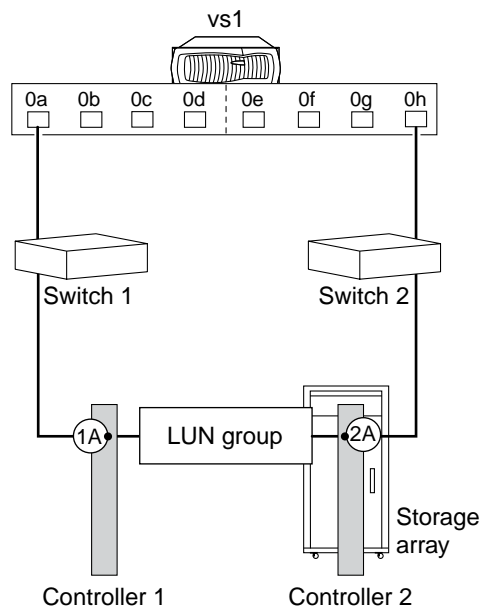


Stand-alone with two 2-port array LUN groups

In a stand-alone Data ONTAP system which is in a fabric-attached simple configuration, each FC initiator port pair present on the Data ONTAP system accesses a separate array LUN group.

This configuration is supported for use with all storage arrays listed in the *Interoperability Matrix* as supported for the release and mode of Data ONTAP running on your system.

The following illustration shows this configuration:

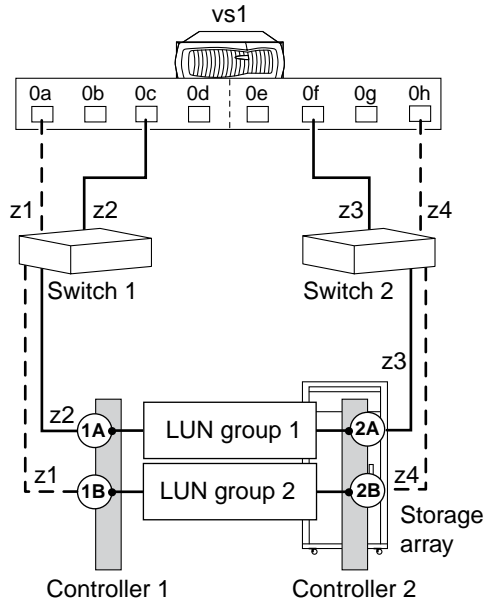


Single 4-port array LUN group

This configuration contains a single, 4-port LUN group with each target port accessed by a single Data ONTAP FC initiator port from the HA pair. Zoning ensures that there are only two paths to a specific array LUN from each Data ONTAP system.

This configuration is supported for use with all storage arrays listed in the *Interoperability Matrix* as supported for the release and mode of Data ONTAP running on your system.

The following illustration shows this configuration:

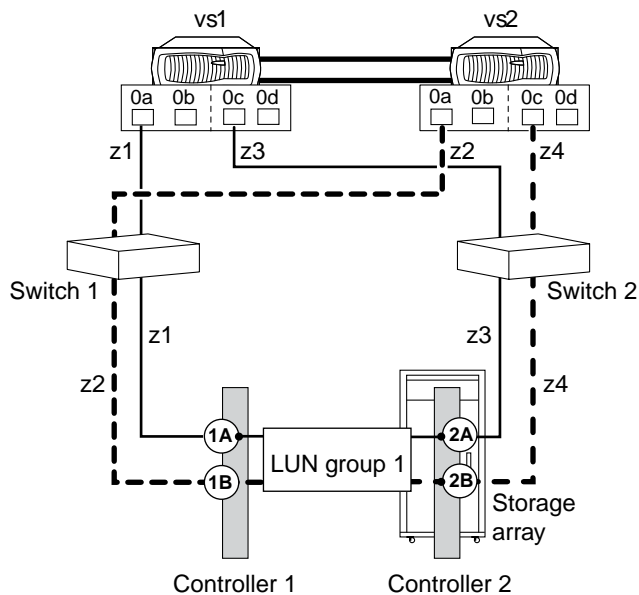


Two 4-port array LUN groups

In this configuration, each Data ONTAP FC initiator port pair accesses a separate array LUN group. The zoning is a single Data ONTAP FC initiator to a single array target port.

This configuration is supported for use with all storage arrays listed in the *Interoperability Matrix* as supported for the release and mode of Data ONTAP running on your system.

The following illustration shows a block diagram of this configuration:

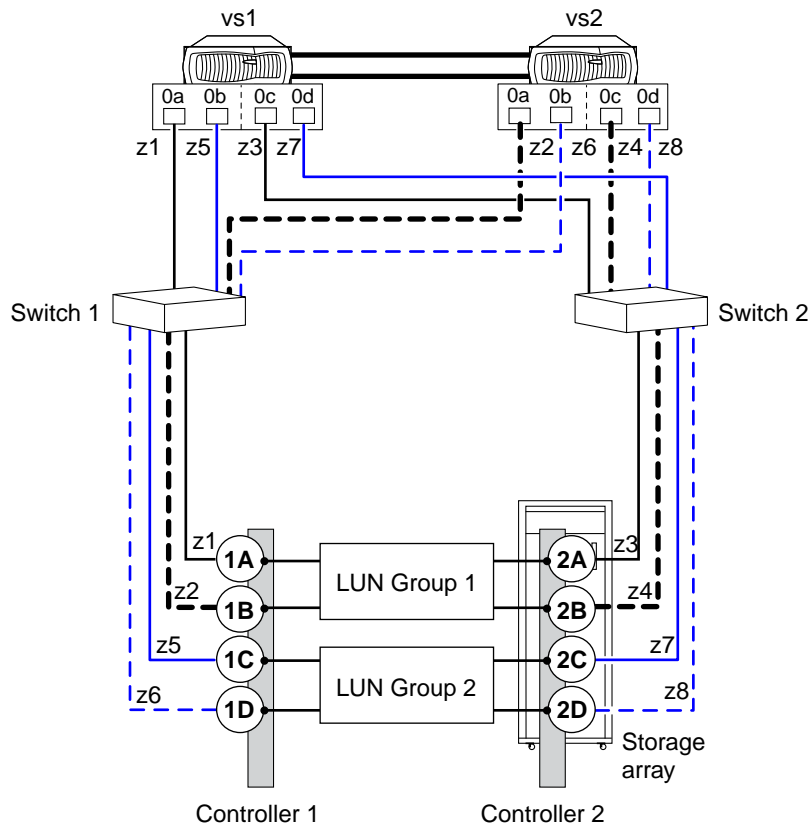

Eight-port array LUN group configuration

Starting in Data ONTAP 8.2, an eight-port LUN group configuration is supported on clustered V-Series systems and, starting in Data ONTAP 8.2.1, also on Data ONTAP systems that can use array LUNs.

This configuration is supported for use with all storage arrays listed in the *Interoperability Matrix* as supported for the release and mode of Data ONTAP running on your system.


There are two ways of deploying this configuration: crossed and uncrossed back-end connections.

Crossed back-end connections

In this configuration with the back-end connections crossed, the FC connections from the same storage array controller go to both fabric switches (redundant).

In this illustration of crossed back-end connections, note how the nodes are attached to the switches and to the storage array. Vs1 uses switch 1 when attaching to the storage array Controller 1 port 1A and Controller 2 port 2C, and uses switch 2 when attaching to storage array Controller 2 ports 2A and

Controller 1 port 1C. This optimizes the use of switch ports and array ports, which reduces the impact of a switch or storage array controller failure.

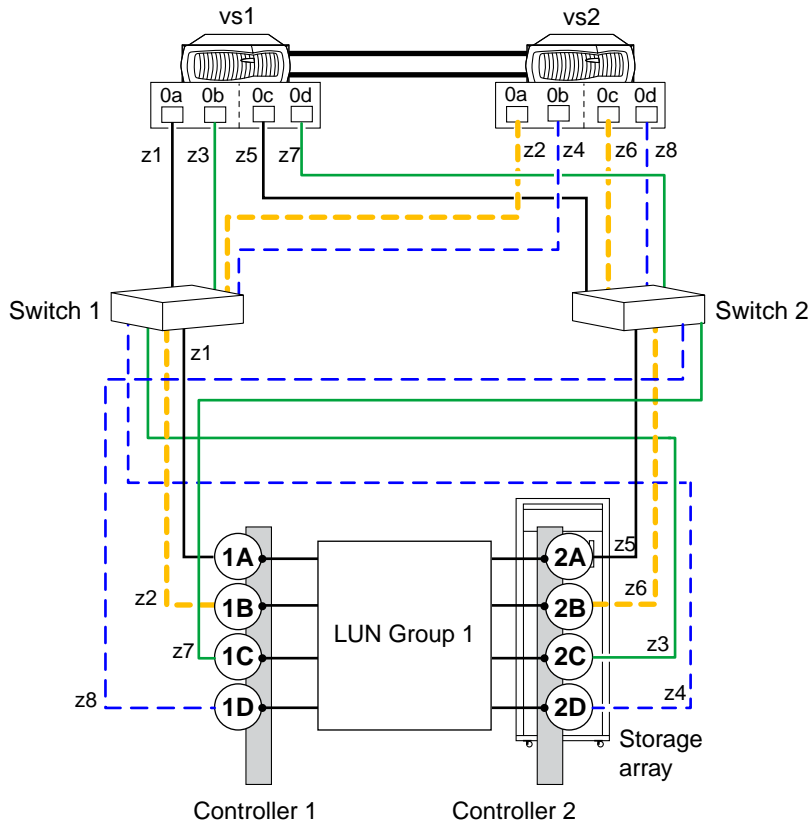


Note: The following problem can occur with Active-Passive storage arrays in crossed back-end connections: If one of the fabric switches is taken offline or goes down and a path failure from both Data ONTAP systems occurs, the Data ONTAP systems panic even though the alternate path from each system is still online. For example, if switch 2 is down and the “0b” paths on both vs1 and vs2 go down, vs1 and vs2 panic even though the “0a” paths are still online.

Back-end connections are not crossed

In this configuration in which the back-end connections are not crossed, the FC connections from the same storage array controller go to only one fabric switch.

The following illustration shows this configuration when the back-end connections are not crossed.

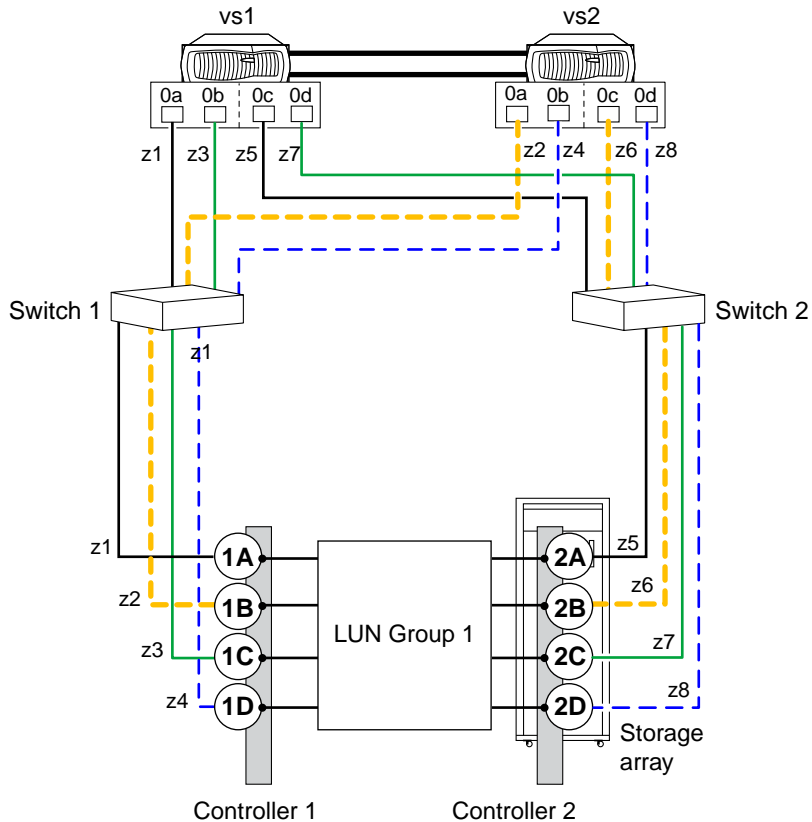

Data ONTAP FC initiator port attaching to multiple targets ports

Starting in Data ONTAP 8.2, a Data ONTAP FC initiator port can be attached to multiple target ports on separate storage arrays within the same family. The *FlexArray Virtualization Installation Requirements and Reference Guide* contains the rules for setting up this configuration. This configuration is not supported with MetroCluster configurations.


This configuration is supported for use with all storage arrays listed in the *Interoperability Matrix* as supported for the release and mode of Data ONTAP running on your system.

The following illustration shows a shared Data ONTAP FC initiator port configuration with an HA pair. However, sharing an FC initiator port with multiple target ports is supported with both stand-alone systems and HA pairs.

For details about sharing an FC initiator port with multiple target ports and zoning, see the information in the *FlexArray Virtualization Installation Requirements and Reference Guide*.

One Data ONTAP FC initiator port connecting to target ports on separate storage arrays

The following example shows an HA pair in which a single Data ONTAP FC initiator port connects to multiple target ports on different storage arrays:

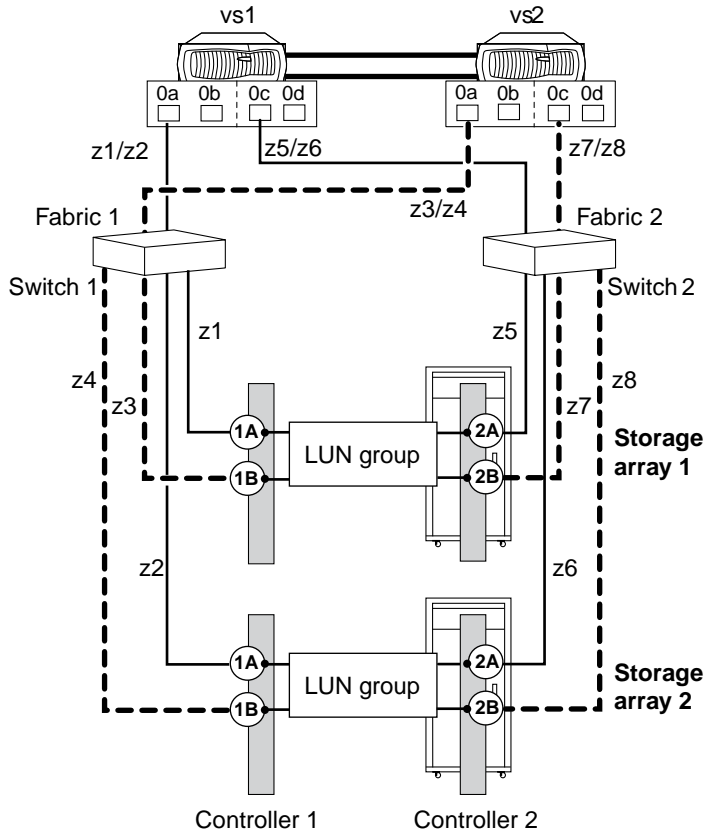

Supported direct-attached configurations with E-Series storage arrays

Starting with Data ONTAP 8.2.1, you can connect Data ONTAP systems in direct-attached configurations with E-Series storage arrays. You must ensure redundancy in connections between the Data ONTAP systems and the storage arrays to avoid the possibility of a single point of failure.

The Interoperability Matrix contains information about the specific E-Series array models that are supported in direct-attached configurations with Data ONTAP systems.


Data ONTAP supports the following direct-attached configurations with E-Series storage arrays:

- [Stand-alone basic configuration](#) on page 14
- [Four-port array LUN group](#) on page 14
- [Eight-port array LUN group](#) on page 16

Stand-alone basic configuration

In a stand-alone basic configuration, two FC initiator ports from the Data ONTAP system access the ports of a two-port array LUN group.


The following illustration shows a direct-attached configuration where the Data ONTAP FC initiator ports 0a and 0h access the target ports of a two-port array LUN group:

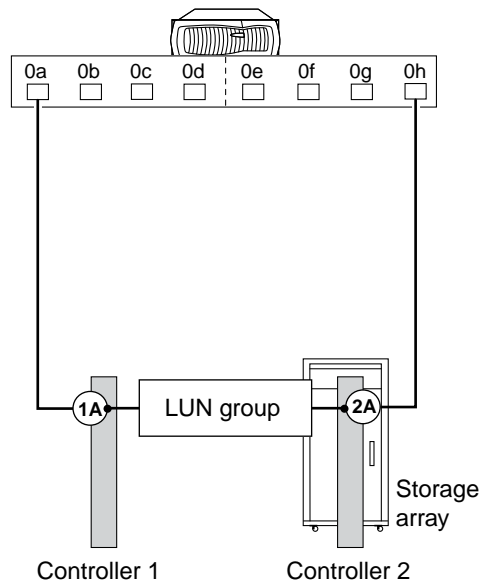

Four-port array LUN group


Two FC initiator ports from each Data ONTAP system in an HA pair access different storage array ports in a four-port array LUN group for redundancy in connections.

The following illustration shows a direct-attached configuration where the Data ONTAP FC initiator ports access the target ports of a four-port array LUN group.

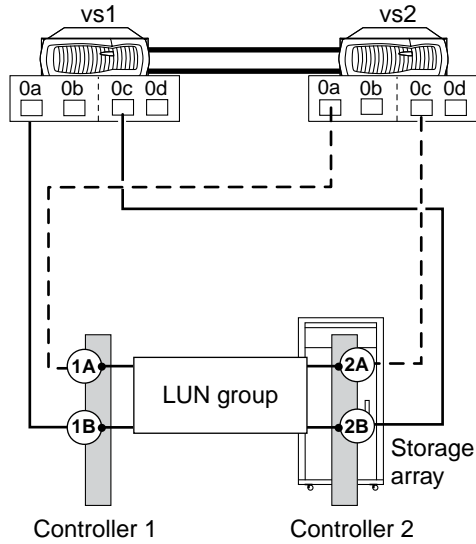

You can also connect four FC initiator ports from each Data ONTAP system in the HA pair to two different four-port array LUN groups such that each FC initiator port in a port pair accesses the alternate LUN group.


The following illustration shows a direct-attached configuration where the Data ONTAP FC initiator ports access the target ports of two four-port array LUN groups:

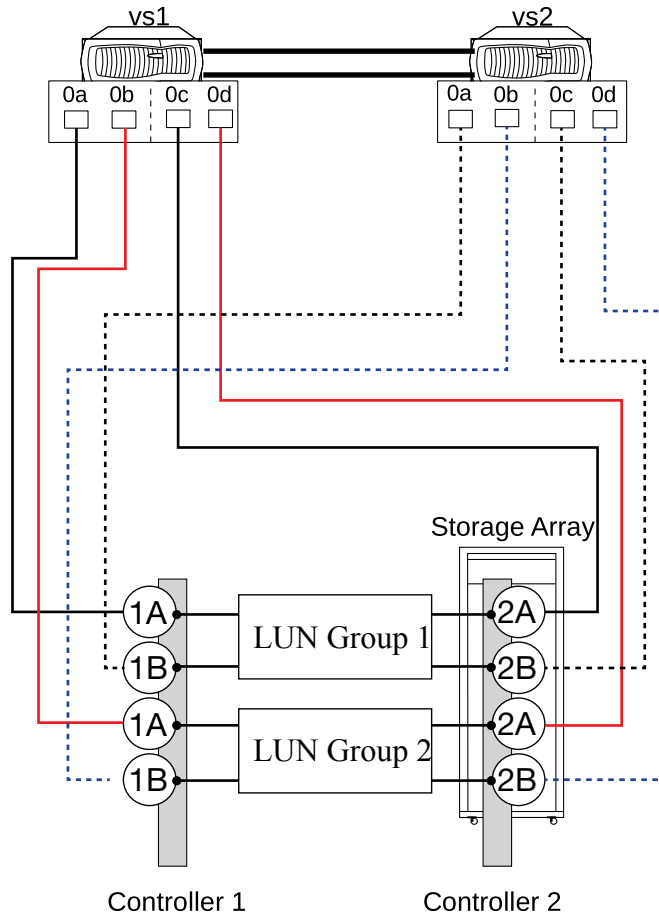

Eight-port array LUN group

Four FC initiator ports from each Data ONTAP system in an HA pair access different storage array ports in an eight-port array LUN group for redundancy in connections.

The following illustration shows a direct-attached configuration where the Data ONTAP FC initiator ports access the target ports of an eight-port array LUN group:

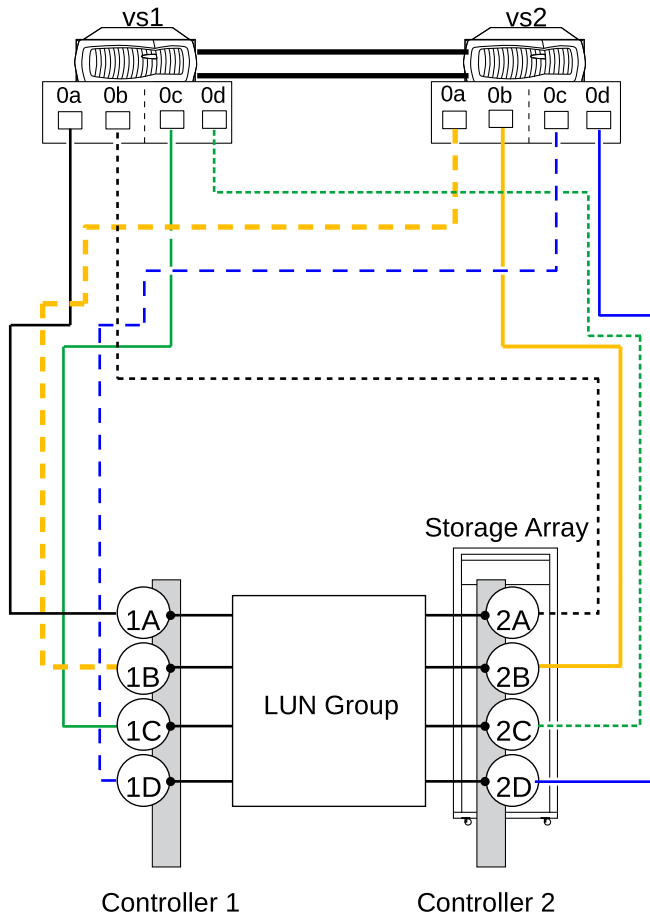

Copyright information

Copyright © 1994–2015 NetApp, Inc. All rights reserved. Printed in the U.S.

No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark information

NetApp, the NetApp logo, Go Further, Faster, AltaVault, ASUP, AutoSupport, Campaign Express, Cloud ONTAP, Clustered Data ONTAP, Customer Fitness, Data ONTAP, DataMotion, Fitness, Flash Accel, Flash Cache, Flash Pool, FlashRay, FlexArray, FlexCache, FlexClone, FlexPod, FlexScale, FlexShare, FlexVol, FPolicy, GetSuccessful, LockVault, Manage ONTAP, Mars, MetroCluster, MultiStore, NetApp Insight, OnCommand, ONTAP, ONTAPI, RAID DP, RAID-TEC, SANtricity, SecureShare, Simplicity, Simulate ONTAP, Snap Creator, SnapCenter, SnapCopy, SnapDrive, SnapIntegrator, SnapLock, SnapManager, SnapMirror, SnapMover, SnapProtect, SnapRestore, Snapshot, SnapValidator, SnapVault, StorageGRID, Tech OnTap, Unbound Cloud, and WAFL and other names are trademarks or registered trademarks of NetApp, Inc., in the United States, and/or other countries. All other brands or products are trademarks or registered trademarks of their respective holders and should be treated as such. A current list of NetApp trademarks is available on the web at <http://www.netapp.com/us/legal/netapptmlist.aspx>.

How to send comments about documentation and receive update notifications

You can help us to improve the quality of our documentation by sending us your feedback. You can receive automatic notification when production-level (GA/FCS) documentation is initially released or important changes are made to existing production-level documents.

If you have suggestions for improving this document, send us your comments by email to doccomments@netapp.com. To help us direct your comments to the correct division, include in the subject line the product name, version, and operating system.

If you want to be notified automatically when production-level documentation is released or important changes are made to existing production-level documents, follow Twitter account @NetAppDoc.

You can also contact us in the following ways:

- NetApp, Inc., 495 East Java Drive, Sunnyvale, CA 94089 U.S.
- Telephone: +1 (408) 822-6000
- Fax: +1 (408) 822-4501
- Support telephone: +1 (888) 463-8277

Index

8-port array LUN group configuration
support for [10](#)

A

array LUNs
systems running Data ONTAP that can use [6](#)

C

comments
how to send feedback about documentation [19](#)
configuration requirements
E-Series storage arrays [7](#)
where to get information about Data ONTAP
systems and E-Series [4](#)
configurations
where to get information about supported Data
ONTAP systems and E-Series [4](#)
configurations supported with storage arrays
8-port array LUN group [10](#)
FC initiator port attaching to multiple targets ports
[12](#)
single 4-port array LUN group [9](#)
stand-alone basic configuration [8](#)
stand-alone with two 2-port array LUN groups [8](#)
two 4-port array LUN groups [10](#)

D

documentation
how to receive automatic notification of changes to
[19](#)
how to send feedback about [19](#)

E

E-Series
setting the host type [7](#)
E-Series storage arrays
configuration requirements [7](#)
supported direct-attached configurations with [14](#)
supported fabric-attached configurations [8](#)

F

FC initiator ports
sharing target ports
supported configuration [12](#)
feedback
how to send comments about documentation [19](#)

H

host type
settings for E-Series [7](#)

I

information
how to send feedback about improving
documentation [19](#)
initiator ports
sharing with multiple target ports
supported configuration [12](#)

L

LUNs (array)
systems running Data ONTAP that can use [6](#)
LUNs, array
See LUNs (array)

P

ports
sharing initiator port with target ports
supported configuration [12](#)

S

shared FC initiator target ports
supported configuration [12](#)
single 4-port array LUN group configuration
support for [9](#)
stand-alone basic configuration
support for [8](#)
stand-alone with two 2-port array LUN groups
configuration
support for [8](#)
suggestions
how to send feedback about documentation [19](#)
supported configurations
where to get information about Data ONTAP
systems and E-Series [4](#)
supported configurations with storage arrays
8-port array LUN group [10](#)
FC initiator port attaching to multiple targets ports
[12](#)
single 4-port array LUN group [9](#)
stand-alone basic configuration [8](#)
stand-alone with two 2-port array LUN groups [8](#)
two 4-port array LUN groups [10](#)
supported direct-attached configurations with storage
arrays
eight-port HA pair configuration [14](#)
four-port HA pair configuration [14](#)
two-port stand-alone configuration [14](#)
supported fabric-attached configurations
E-Series storage arrays [8](#)

T

twitter

how to receive automatic notification of documentation changes [19](#)
two 4-port array LUN groups configuration support for [10](#)

V

V-Series functionality

name change to FlexArray Virtualization [6](#)
V-Series systems
 See LUNs (array)

Z

zoning
 shared FC initiator port supported configuration [12](#)