



Replacing a Drive in the DE6600 Drive Tray

To access this product, go to the NetApp® Support Site at mysupport.netapp.com.

You can determine whether you have a failed drive in two ways:

1. The Recovery Guru directs you to replace a failed drive.
2. You locate the failed drive by checking the three amber Service Action Required LEDs in three locations: the drive tray, the drive drawer, and the drive itself.

Install only drives that are specifically designed for your controller-drive tray and that have been specifically tested, formatted, and qualified in the factory as replacement drives for your controller-drive tray.

ATTENTION Possible equipment damage – You must replace the drive within three minutes after removal to prevent the possibility of overheating the equipment.


ATTENTION Possible loss of data access – Never insert drives into the drive tray without first confirming that the drive firmware level is compatible with the firmware level of the other drives. Inserting a drive with an incorrect firmware level can cause loss of data access. For information about the supported drive firmware levels, contact your Technical Support Representative.

ATTENTION Possible loss of data access – Magnetic fields can destroy all data on the drive and cause irreparable damage to the drive circuitry. To avoid loss of data access and damage to the drives, always keep drives away from magnetic devices.

ATTENTION Possible hardware damage – To prevent electrostatic discharge damage to the tray, use proper antistatic protection when handling tray components.

Taking a Quick Glance at the DE6600 Drive Tray


Figure 1. LEDs on the Left End Cap of the DE6600 Drive Tray – Front View with the Bezel Removed

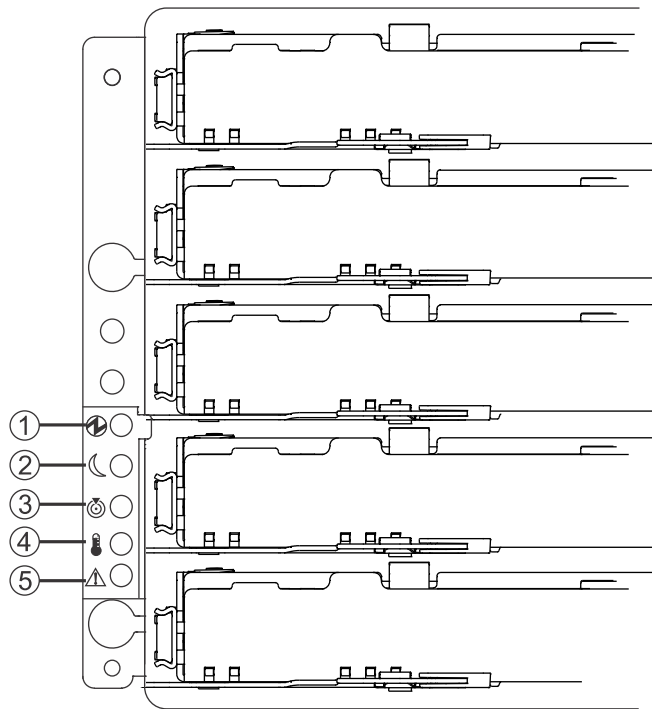

92034-09


1. Power LED (Green)
2. Standby LED Drive Tray (Green)
3. Drive Tray Locate LED (White)
4. Drive Tray Over-Temperature LED (Amber)
5. Service Action Required LED (Amber)

Figure 2. LEDs on the Drive Drawer – Front View

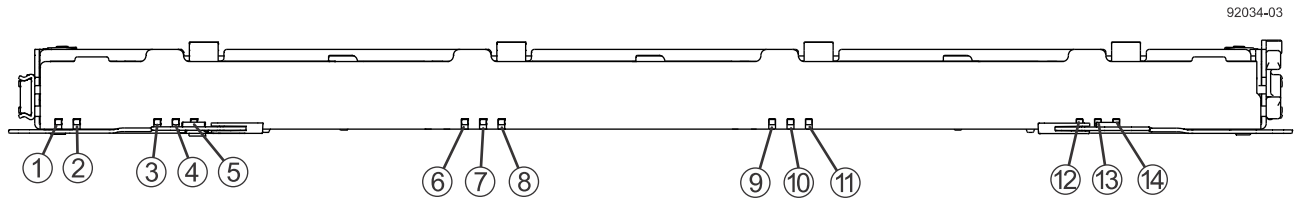

1. Drive Drawer Status Service Action Allowed LED
2. Drive Drawer Status Service Action Required LED
3. Drive 1 Activity LED
4. Drive 2 Activity LED
5. Drive 3 Activity LED
6. Drive 4 Activity LED
7. Drive 5 Activity LED
8. Drive 6 Activity LED
9. Drive 7 Activity LED
10. Drive 8 Activity LED
11. Drive 9 Activity LED
12. Drive 10 Activity LED
13. Drive 11 Activity LED
14. Drive 12 Activity LED

Figure 3. LEDs on the Drive – Top View

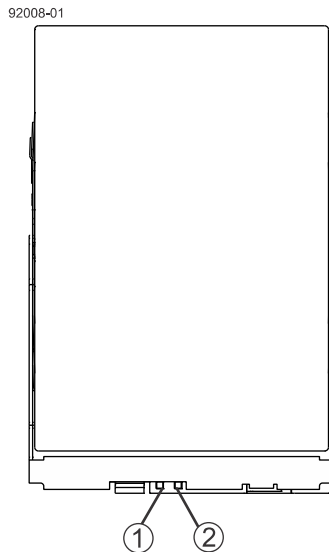

1. Drive Service Action Allowed LED
2. Drive Service Action Required LED

Replacing a Drive in the DE6600 Drive Tray

1. Gather support data about your storage array by using one of these methods:
 - Use the storage management software to collect and save a support bundle of your storage array. From the Array Management Window, select **Monitor > Health > Collect Support Data Manually**. Then name and specify a location on your system where you want to store the support bundle.
 - Use the command line interface (CLI) to run the `save storageArray supportData` command to gather comprehensive support data about the storage array. For more information about this command, refer to the *Command Line Interface and Script Commands Programming Guide*.

Gathering support data can temporarily impact performance on your storage array.

2. Did the Recovery Guru direct you to replace a failed drive?
 - **Yes** – Go to step [3](#).
 - **No** – Run the Recovery Guru to identify the failed component, and then go to [step 3](#).
3. Put on antistatic protection.
4. Unpack the new drive.
 - a. Set the new drive on a flat, static-free surface near the drive tray.
 - b. Save all of the packing materials in case you need to return the drive.
5. Remove the bezel from the front of the drive tray.
6. Locate the failed drive by checking the Drive Drawer Service Action Required LEDs (Figure [2](#)) on the front of the drive tray.


If a fault is detected, the amber Drive Drawer Service Action Required LED is on. If you can safely remove the drive, the blue Drive Drawer Service Action Allowed LED is on.

ATTENTION Possible damage to drives – After the blue Drive Drawer Service Action Allowed LED comes on, wait 30 seconds before you open the drive drawer. Waiting 30 seconds allows the drive to spin down, which prevents possible damage to the hardware. To prevent possible damage to the other spinning drives in the drive drawer, open the drive drawer slowly.

7. Release the levers on each side of the drive drawer by pulling both towards the center.

NOTE If you are replacing multiple drives in separate drawers, only one drawer can be extended at a time.


Figure 4. Drive Drawer Levers

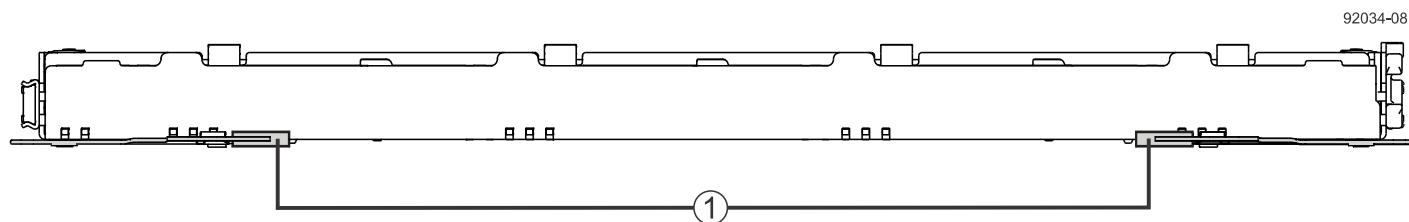

1. Drive Drawer Levers

- Carefully pull on the extended drive drawer levers to pull out the drive drawer to its full extension without removing it from the drive tray.


Figure 5. Fully Populated Drive Drawer

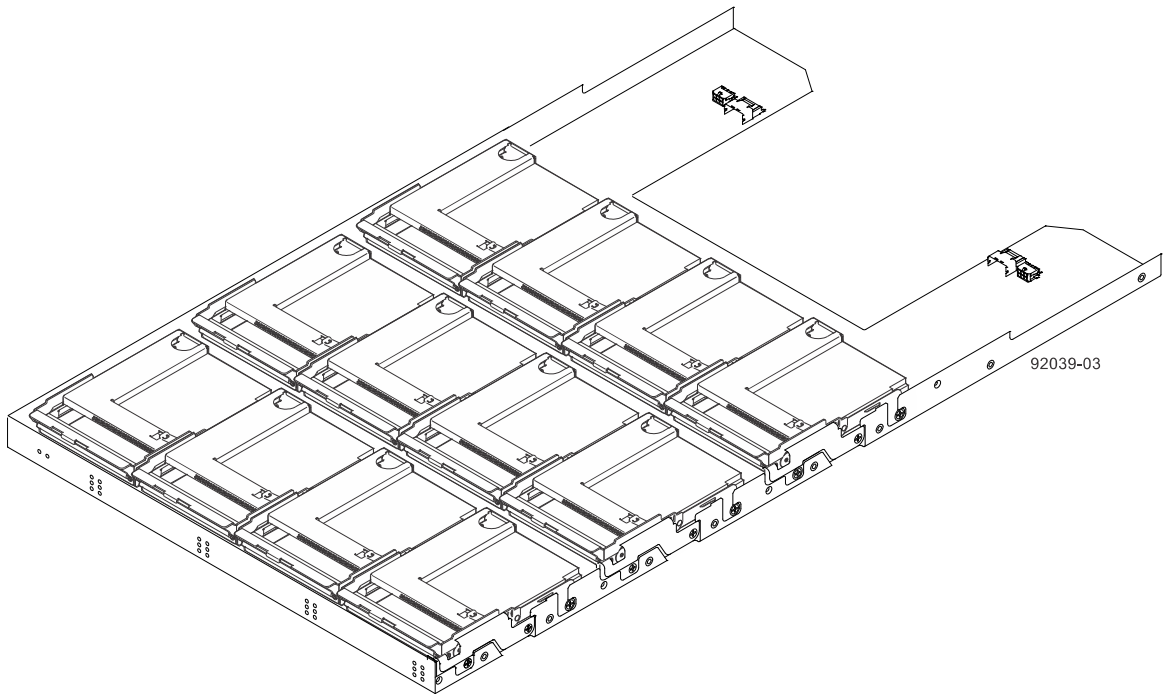

- Remove the failed drive from the drive drawer by referring to "LEDs on the Drive -- Top View" (Figure 3) to determine which drive has failed. To remove a drive, perform these steps:

- a. Locate the drive release lever that secures the drive handle in place. Disengage the drive release lever by carefully pulling it back to release the drive handle.


Figure 6. Drive Release Lever

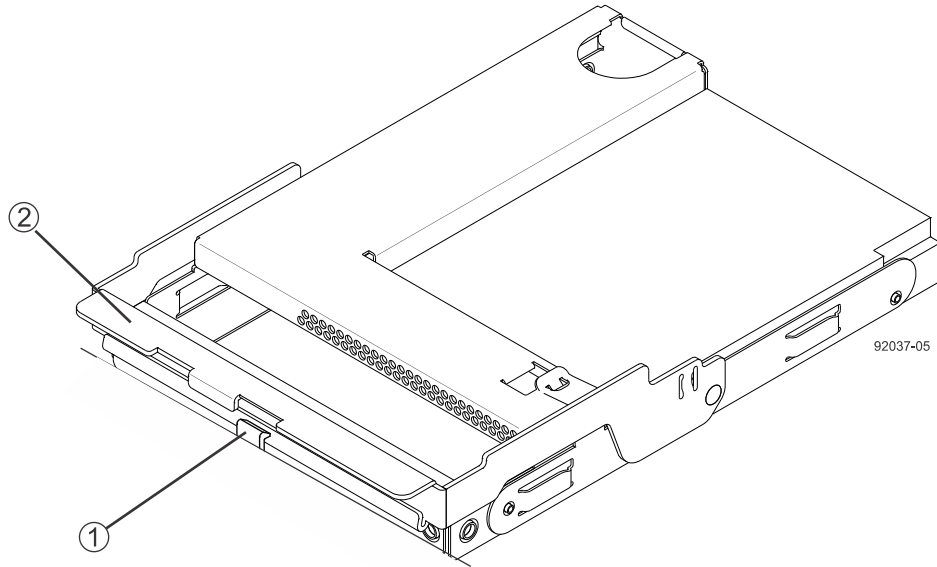

1. Drive Release Lever
2. Drive Handle

- b. Raise the drive handle to the vertical position.

Figure 7. Raised Drive Handle

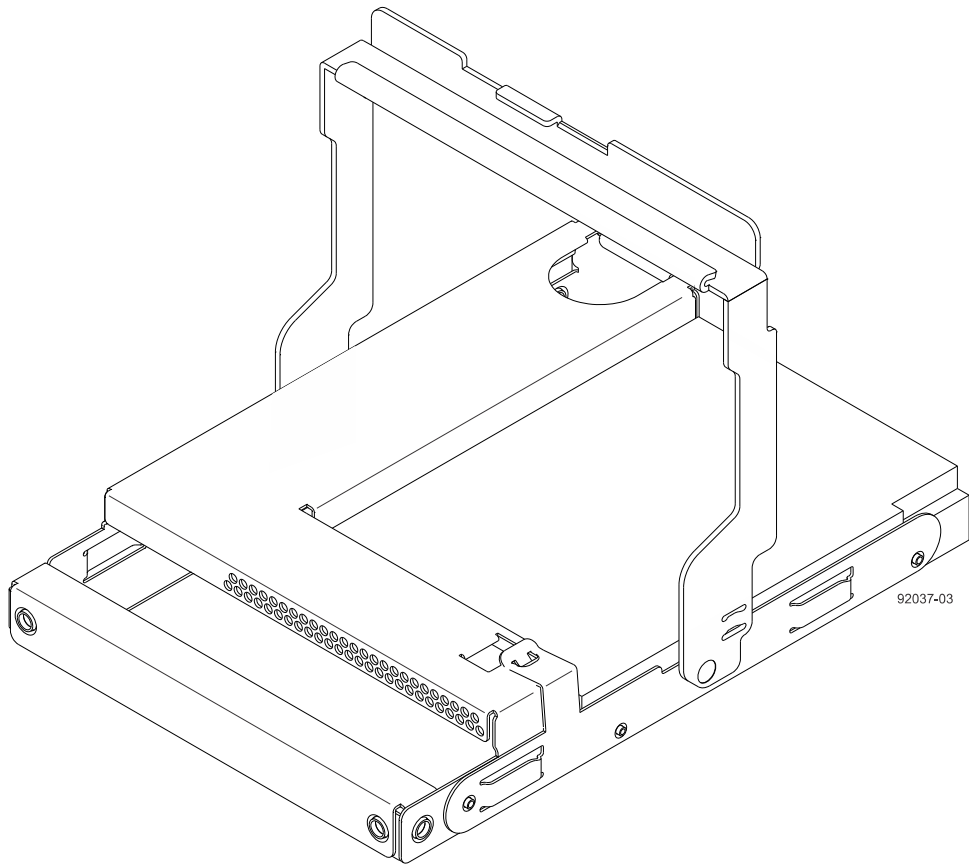


- c. Lift the drive from the drive drawer by using the drive handle, and put the drive on a flat, static-free surface. If you are removing multiple drives, label each drive with the tray number, the drive drawer number, and the slot number. Then if the fault is with the drive drawer and not the drive, the drive can be re-used.

10. To install the new drive, raise the drive handle on the new drive to the vertical position.

11. Align the two raised buttons on each side over the matching gap in the drive channel on the drive drawer.


Figure 8. Drive with Raised Handle – Side View

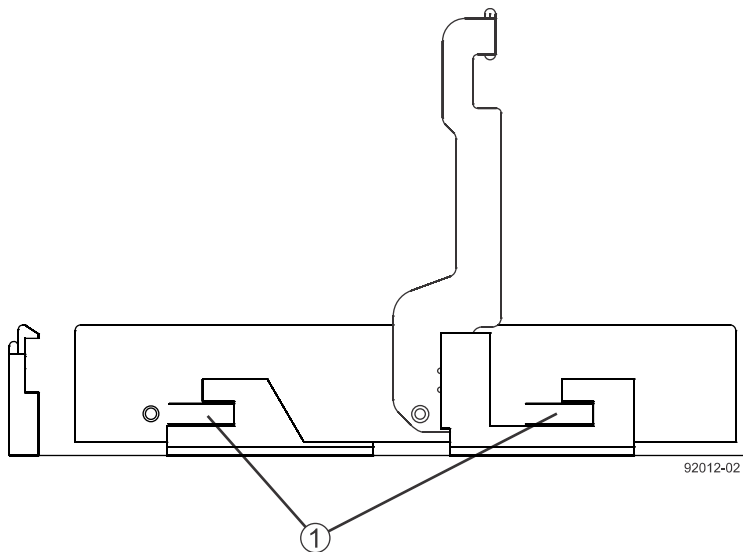

1. Raised Buttons

12. Lower the drive straight down, and then rotate the drive handle down until the drive snaps into place under the drive release lever.

Figure 9. Drive Release Lever Locked by the Drive Handle

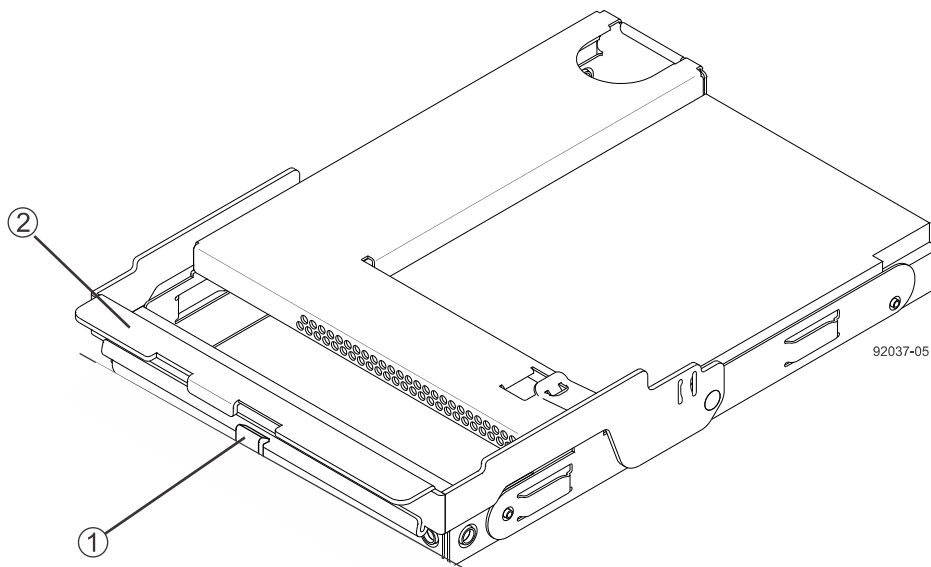

1. Drive Release Lever

2. Drive Handle

13. Push the drive drawer all the way into the drive tray, and close the levers on each side of the drive drawer.

ATTENTION Possible equipment malfunction – Make sure that you push both drive drawer levers to each side so that the drive drawer is completely closed. The drive drawer must be completely closed to allow proper airflow and prevent overheating.

NOTE Depending on your configuration, the controller might automatically reconstruct data to the new drive. If the controller-drive tray uses hot spares, the controller might need to perform a complete reconstruction on the hot spare before the controller copies the data to the replaced drive. This reconstruction process increases the time that is required to complete this procedure.

14. Look at the Drive Drawer Service Action Required LED. Based on the LED status, perform one of these actions:
- **The Drive Drawer Service Action Required LED is on** – The drive might not be installed correctly, or the new drive might be defective. Remove the drive, wait 60 seconds, and reinstall the drive. If it still fails, replace it with another new drive. Go to step [15](#).
 - **The Drive Drawer Service Action Required LED is off** – Go to step [16](#).
15. Did this action correct the problem?
- **Yes** – Go to step [16](#).
 - **No** – If the problem is not resolved, contact your Technical Support Representative.
16. Install the bezel on the front of the drive tray.
17. Bring the new drive back online by using the storage management software:
- a. In the Array Management Window, highlight the affected volume group and then select the menu option **Replace Drives**.
 - b. Select the replaced drive that corresponds to the slot location or select an appropriate replacement drive.
 - c. Click the **Replace Drive** button. When the drive reconstruction completes, the volume group is in an Optimal state.
18. Check the status of all of the trays in the storage array.
19. Does any component have a Needs Attention status?
- **Yes** – Click the **Recovery Guru** toolbar button in the Array Management Window, and complete the recovery procedure. If the problem is not resolved, contact your Technical Support Representative.
 - **No** – Go to step [20](#).
20. Remove the antistatic protection.
21. Gather support data about your updated storage array by using one of these methods:
- Use the storage management software to collect and save a support bundle of your storage array. From the Array Management Window toolbar, select **Monitor > Health > Collect Support Data Manually**. Then name and specify a location on your system where you want to store the support bundle.
 - Use the CLI to run the `save storageArray supportData` command to gather comprehensive support data about the storage array. For more information about this command, refer to *Command Line Interface and Script Commands Programming Guide*.
- Gathering support data can temporarily impact performance on your storage array.

Trademark information

NetApp, the NetApp logo, Network Appliance, the Network Appliance logo, Akorri, ApplianceWatch, ASUP, AutoSupport, BalancePoint, BalancePoint Predictor, Bycast, Campaign Express, ComplianceClock, Cryptainer,

CryptoShred, CyberSnap, Data Center Fitness, Data ONTAP, DataFabric, DataFort, Decru, Decru DataFort, DenseStak, Engenio, Engenio logo, E-Stack, ExpressPod, FAServer, FastStak, FilerView, Flash Accel, Flash Cache, Flash Pool, FlashRay, FlexCache, FlexClone, FlexPod, FlexScale, FlexShare, FlexSuite, FlexVol, FPolicy, GetSuccessful, gFiler, Go further, faster, Imagine Virtually Anything, Lifetime Key Management, LockVault, Manage ONTAP, Mars, MetroCluster, MultiStore, NearStore, NetCache, NOW (NetApp on the Web), Onaro, OnCommand, ONTAPI, OpenKey, PerformanceStak, RAID-DP, ReplicatorX, SANSscreen, SANshare, SANtricity, SecureAdmin, SecureShare, Select, Service Builder, Shadow Tape, Simplicity, Simulate ONTAP, SnapCopy, Snap Creator, SnapDirector, SnapDrive, SnapFilter, SnapIntegrator, SnapLock, SnapManager, SnapMigrator, SnapMirror, SnapMover, SnapProtect, SnapRestore, Snapshot, SnapSuite, SnapValidator, SnapVault, StorageGRID, StoreVault, the StoreVault logo, SyncMirror, Tech OnTap, The evolution of storage, Topio, VelocityStak, vFiler, VFM, Virtual File Manager, VPolicy, WAFL, Web Filer, and XBB are trademarks or registered trademarks of NetApp, Inc. in the United States, other countries, or both.

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corporation in the United States, other countries, or both. A complete and current list of other IBM trademarks is available on the web at <http://www.ibm.com/legal/copytrade.shtml>.

Apple is a registered trademark and QuickTime is a trademark of Apple, Inc. in the United States and/or other countries. Microsoft is a registered trademark and Windows Media is a trademark of Microsoft Corporation in the United States and/or other countries. RealAudio, RealNetworks, RealPlayer, RealSystem, RealText, and RealVideo are registered trademarks and RealMedia, RealProxy, and SureStream are trademarks of RealNetworks, Inc. in the United States and/or other countries.

All other brands or products are trademarks or registered trademarks of their respective holders and should be treated as such.

NetApp, Inc. is a licensee of the CompactFlash and CF Logo trademarks.

NetApp, Inc. NetCache is certified RealSystem compatible.

How to send your comments

You can help us to improve the quality of our documentation by sending us your feedback.

Your feedback is important in helping us to provide the most accurate and high-quality information. If you have suggestions for improving this document, send us your comments by email to doccomments@netapp.com. To help us direct your comments to the correct division, include in the subject line the product name, version, and operating system.

You can also contact us in the following ways:

- NetApp, Inc., 495 East Java Drive, Sunnyvale, CA 94089 U.S.
- Telephone: +1 (408) 822-6000
- Fax: +1 (408) 822-4501
- Support telephone: +1 (888) 463-8277